

UES Drawer Slides are easy to install and available in various lengths to suit a range of applications. Perfect for bathroom vanity, kitchen furniture, office furniture, home cabinet.

- Easy to install
- Additional ball bearings for a super smooth glide
- Screws included

Material






Steel

Finish

Zinc Plated

Features

- Full extension
- Profile: 45.5mmX12.7mm

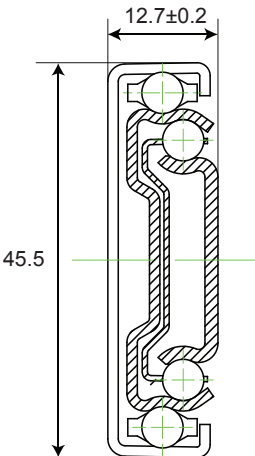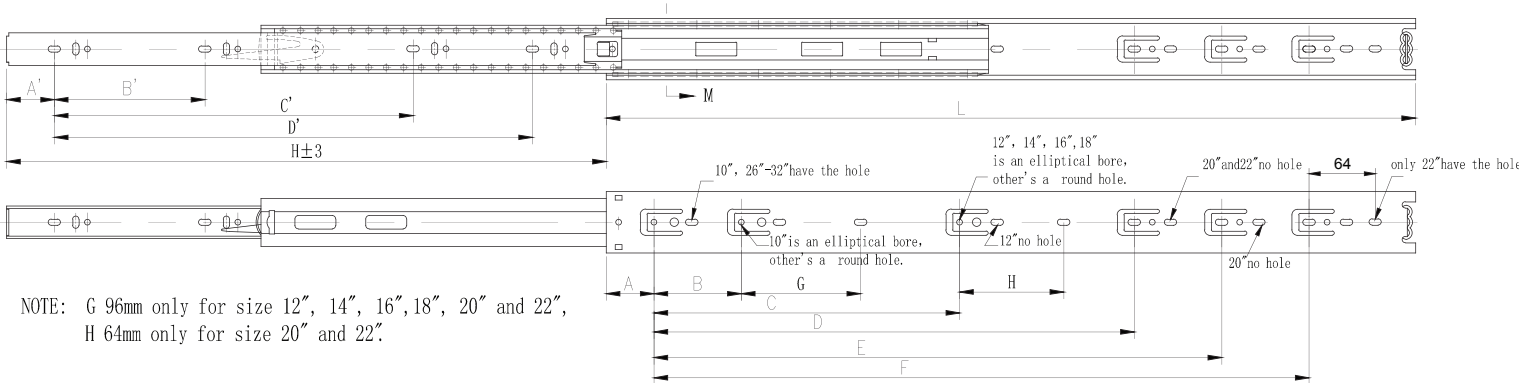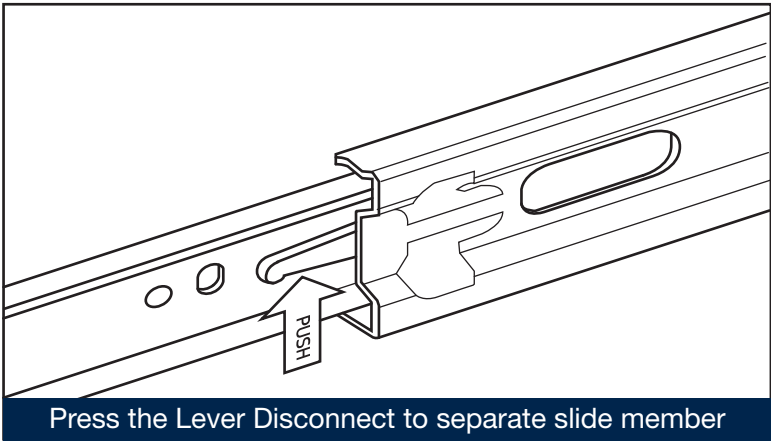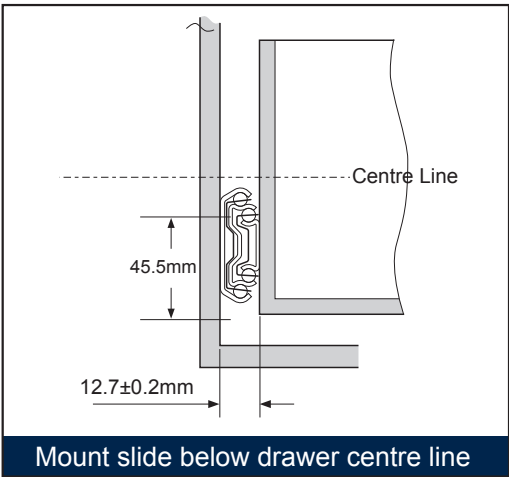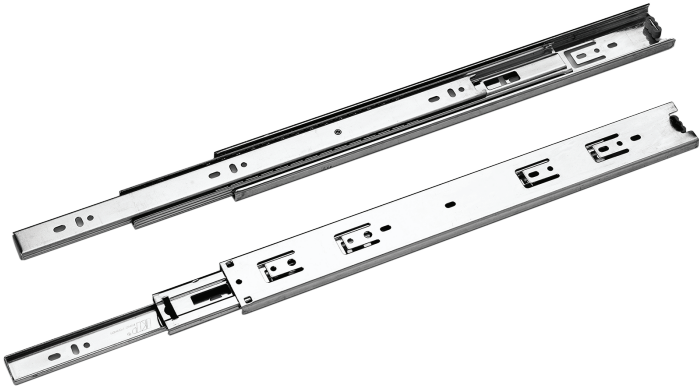


SIZE	L	H	A	B	C	D	E	F	A'	B'	C'	D'
10"	250	250	35	160					35	160		
12"	300	300	35	64	224				35	96	192	
14"	350	350	35	64	224				35	128	256	
16"	400	400	35	64	224	288			35	128	320	
18"	450	450	35	64	224	352			35	160	352	
20"	500	500	35	64	224	352	416		35	192	416	
22"	550	550	35	64	224	352	416		35	224	448	
24"	600	600	35	64	224	352	480		35	224	512	
26"	650	650	35	64	224	352	512		35	256	544	
28"	700	700	35	64	224	352	480	608	35	288	608	
30"	750	750	35	64	224	352	480	608	35	288	640	
32"	800	800	35	64	224	352	480	672	35	256	512	704


# Installation Instructions

1. Screw fixing the slides to the inside of the cabinet unit through slide holes and make sure both slides are mounted vertically and horizontally parallel. Use as many screws as you think is necessary for the cabinet unit. Repeat to mount the second drawer slide on the opposite side of the cabinet.

Affix screws via slide holes on the outer slides to the cabinet

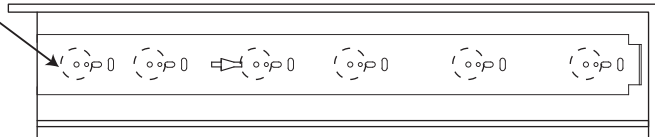


Cabinet Unit

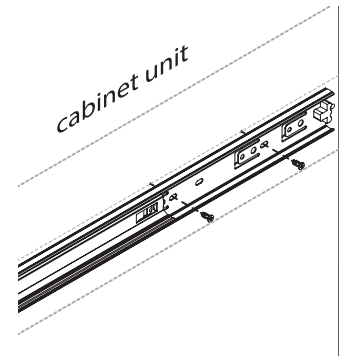

2. Screw fixing the drawer unit to the cabinet unit through slides holes. When marking hole placements you **MUST NOT** drill through the slide holes during installation. Doing this will create metal filings which lodge in the tracks resulting in rough running and ultimately, failure of the slides.

Depending on substrate, stainless steel 'flat head' hex screws with NY-lock nuts or stainless steel rivets are recommended.

Affix screws via slide holes on the inner slides to the drawer

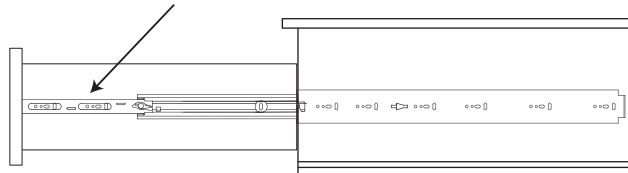

3. With the internal member attached to drawer unit and external member attached to cabinet unit, now it's time to place your drawer into the cabinet. The drawer should slide in without issue. If the slide does not fit, unfasten screws slightly and adjust slide members to correct position. Once this is done, repeat starting from step 1 for all remaining drawers.

Our slides are designed to be mounted horizontally and paired side by side.

Mounting them vertically one above the other or in a flat position will void the warranty.

